

User Manual

Model number: PSF1
support@parsonver.com

EN(01-06) JP(07-12)



Press and hold the side power button to turn on the watch.

Note: For first use, please charge the watch for 5 minutes, otherwise it cannot be turned on, and it takes about 2 hours to fully charge the watch.



Download app



Power on - Click to select the language - Scan the QR code of the watch - Download the "GloryFit" app

For IOS: Apple App Store

For Android: Google Play Store

Pair with Watch



① Open the app, register and log in to your account.



② Click the third small icon "Device" at the bottom of the page - Click "Add a new device" - Click the icon to scan the code in the upper right

corner  -Scan the QR code on the watch (Settings - APP download) - on the watch "Bluetooth Pairing Request" that pops up, select "✓" - to achieve a successful connection (Bluetooth Name: Parsonver PSF1)

Note:

- 1) Turn on the Bluetooth on the mobile phone.
- 2) Reset the watch when no Bluetooth signal found.
- 3) Need to enter the app to pair the watch, cannot connect to the Bluetooth in the phone settings.
- 4) When the Bluetooth is successfully connected, the main interface pulls down and the sign in the upper left corner is  , if there is no connection, the sign in the upper left corner is .

Basic Operation

1. Swipe Down to access quick settings.



Flashlight mode



Brightness adjustment



Do not disturb mode



Find phone



Setting mode



Menu theme selection

2. Swipe Up to enter messages interface.

3. Swipe Right to enter menu interface.

4. Swipe Left to enter Status, Heart, Sleeping, Weather, Music Control interface

5. Press and hold the main interface to select the screen watch dial.

6. Press and hold the right button for about 3 seconds to shut down.

7. Swipe Right on the interface to exit the current function interface.

8. Press the side button can back to home screen.

More Functions



Training

To select a sports mode, view sports time, heart rate, steps, calories, etc., swipe right on the interface to return/end sports mode.



Status

Can view steps, calories, distance.



Heart

Track your heart rate, and can see a 24-hour real-time heart rate graph.

Note: To view the 24-hour real-time heart rate graph, Open the app and find the third small icon "Device" at the bottom of the page - Click "Heart rate settings" - Open "Automatic monitoring" & "Maximum heart rate reminder 180" (When the measured value exceeds 180, it will vibrate to remind.)



Sleeping

Monitoring sleep data, can view sleep time, light sleep time, deep sleep time.



Message

Open the app - Click the third small icon "Device" at the bottom - select message reminder type



Weather

Check the weather conditions. Swipe down to see the weather for the next week.



Female Health

Open the app and find the fourth small icon "Profile" at the bottom of the page - Click "Menstrual cycle" to set reminders



Shake for Photograph

Open the app and find the third small icon "Device" at the bottom of the page - Click "More settings" - Click "Shake to take picture" and shake the watch to take photos



Setting Mode

	Dial	Set the watch dials.
	Brightness	Adjust the brightness.
	Bright screen	Set the bright screen time.
	Vibration strength	Adjust vibration intensity.
	About	Check system info, including Bluetooth name, Mac address, firmware version.
	Off	Shut down
	Reset	Reset the watch to factory settings.
	APP download	Scan the code to connect to the watch or download the APP.
	Language	Select language type.

Charge

For charging, please place the watch flat, and make sure the 2 metal holes on the back are aligned with the metal tip of the charging head (charging contact spacing: 4mm).

Note:

- 1) The rated voltage of the charger is 5V/0.5A.
- 2) Please do not use the vehicle power supply to charge, to avoid causing the charging cable to age or burn out due to the unstable voltage.



Replace the watchband

Slide the switch of the watchband, and replace the same specification (watchband width: 20mm).



Precautions

- 1) If you experience any discomfort or rash after wearing, please stop using and contact us to return the product.
- 2) Do not wear the watch when swimming. Please wipe the watch with a clean cloth when getting wet.
- 3) Using correctly to avoid allergy
 - ① Keep your watch clean, especially after workouts, or when the watch is dirty.
 - ② Wear the watch correctly, not too tight or too loose. Don't wear it 24 hours a day, and it is recommended taking off the watch for at least 20 minutes a day.
 - ③ Strengthen the moisture barrier and use moisturizers containing lipids, glycerol and ceramide.
 - ④ Use creams such as hydrocortisone to relieve itching.
 - ⑤ See a dermatologist to get a conclusive answer.



Specifications


Model Number	PSF1
Display	1.57 inch TFT
Resolution	200*320px
Bluetooth	5.1
Compatible Systems	Android 5.0 or above; iOS 9.0 or above
Battery Capacity	200mAh
Working Time	7-10 days
Working Temperature	0-45°C
Storage Temperature	-20-60°C
Rated Voltage	3.7V
Rated Current	90mA

Statement:

The pictures and legends in this document are provided for illustrative purposes only and may differ from the actual condition of the product. Certain components, functions and features mentioned in this document may only be applicable to certain software versions of the product and are provided for illustration purposes only. In case of doubt, you should check with the seller of the product for confirmation.

電源ボタンを押して、スマートウォッチを起動します

注意: 初回使用前に、5 分間以上に充電しないと起動できません。
約2時間にフル充電してください。

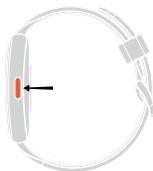

APPダウンロード



スマートウォッチで起動して – 言語を選択 – QRコードをスキャンする – "GloryFit" APPをダウンロード

For IOS: Apple App Store

For Android: Google Play Store

ペアリングについて



① APPを開いて、アカウントを登録してログインします。

② アプリで"デバイス"-"デバイス追加" – 右上の  をクリック – スマートウォッチのQRコードをスキャンする (設置- QRコード) –

スマートウォッチで"携帯とバインドしますか?"と表示されています – "✓" を選択して – ペアリングが成功になります。(Bluetooth 名前: Parsonver PSF1)

注意:

1. 携帯のBluetoothがオンにしてください。
2. Bluetoothが見つからないと、ウォッチをリセット再起動してください。
3. 携帯のBluetooth設定からペアリングすることは間違いですので、ぜひAPPに入ってウォッチとペアリングをしてください。
4. ウォッチのホーム画面でドロップダウンして、ペアリング成功のアイコンは 、ペアリング失敗のアイコンは .

基本操作

1. 上から下にドロップダウンして、ショートカットに入ります。



懐中電灯



輝度調整



マナーモード



スマホ探す



設置



メニューの選択

2. 下から上にスワイプすれば、メッセージ通知画面に入ります。

3. 左から右にスワイプすれば、メイン機能画面に入ります。

4. 右から左にスワイプすれば、歩数や心拍数、天気、音楽制御などに入ります。

5. ホーム画面を長押しすると文字盤を切り替えます。

6. 右側電源ボタンを3秒長く押して電源が切れます。

7. 右にスライドすれば操作画面の終了が行われます。

8. 右側電源ボタンを押して、ホーム画面に戻ります。

もっと機能について



運動モード

ランニング、登山、水泳、テニスなど運動モードを選択して、終了後に具体的な運動データ情報を表示されています。

注意: 右にスワイプと、運動モードを戻す/終了を行います。



歩数

歩数、カロリー、距離をチェックします。



心拍数

心拍数を測定し、24時間のリアルタイム心拍数変化図を見られます。

注意: 心拍数変化図が使用前に以下の設定が必要です。

アプリを開いて – デバイス – 心拍数設置をクリックして – “自動測定と心拍数の注意（最大180）” オンにしてください。心拍数の数は180を超えてバイブでお知らせします。



睡眠

深い睡眠、浅い睡眠の時間情報を記録しました。



メッセージ通知

APPを開いて– デバイス – “メッセージ通知”をオンにして、受信時バイブでお知らせします。



天気

スマートウォッチで上にスワイプすれば、未来一週間の天気を掲載しています。



女性健康管理

APPを開いて– アカウント – 生理周期をクリックして、開始日や生理期間、月経周期を設定できます。

注意: アカウントの性別は女性を選択しなければなりません。



カメラコントロール

使用前に、APPで“デバイス>その他の設置>カメラコントロール”をオンにしてください。スマートウォッチ画面をクリックして写真を撮ります。

設定

-  文字盤を切り替え 本機の5種類文字盤を切り替えます。
-  輝度調整 4段輝度を選択できます。
-  画面点灯時間 5/10/15秒の点灯時間を選択できます。
-  本機情報 Bluetooth名前やMacアドレス、ファームウェアバージョンなどのシステム情報を確認できます。
-  電源オフ 電源をオフにします。
-  リセット 出荷時設定
-  APP ダウンロード 初めてペアリングする場合、QRコードをスキャンして専用APPをダウンロードします。APPからスキャンしてペアリングもできます。
-  振動の強さ 3段振動を選択できます。
-  言葉 言葉を変更できます。

充電について

付属する磁気充電器を本機の裏側にある金属接点に取り付け、充電器のもう一方の端を壁のUSB充電器またはコンピュータのUSB端子に差し込みます。(充電接点間隔: 4mm).

注意:

1. 充電には、5V/2A規格以上の電源アダプターを使用しないでください。
2. 充電ケーブルが溶けるや煙が出るなどの危険事件を避けるため、車載電源と不安定な充電器で充電が禁止してください。



バンドについて

バンドのスイッチを外し、同仕様のバンドを交換可能です (バンド幅: 20mm)



注意事項

1. 着用後に不快感や気触れが生じた場合は使用を中止して下さい。当店のアフターセンターに連絡ください。
2. 水泳ではウォッチを着用しないでください。濡らした後は清潔な布で拭いてください。
3. アレルギーを避けるため、以下の情報をお読みください。
 - ① 運動や水泳後、或いはウォッチ汚れた後時、必ず清潔に保ってください。
 - ② ベルトの調節を心地よいゆるみ、24時間ずっと着用しないで、毎日20分間腕時計を下ろしてください。
 - ③ 水分バリアを強化し、脂質、グリセリン、セラミドを含む保湿剤を使用してください。
 - ④ アレルギー症状と副作用などが出たら、医師に薬の使用を相談してください。
 - ⑤ 皮膚科医に相談して原因を診断してください。

仕様

モテる	PSF1
ディスプレイ	1.57 inch TFT
解像度	200*320px
Bluetooth	5.1
システム対応	Android 5.0 or above; iOS 9.0 or above
バッテリー容量	200mAh
動作時間	7-10 days
動作温度	0-45℃
貯蔵温度	-20-60℃
定格電圧	3.7V
定格電流	90mA

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following 2 conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.


Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



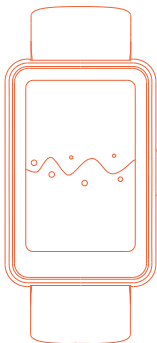

Model number: PSF1

FCC ID: 2A7YB-PSF1

Brand name: Parsonver

UK | AR CET PRODUCT SERVICE LTD.

 Chase Business Centre, 39-41 Chase Side London N14 5BP UK

 info.cetservice@gmail.com

EC | REP UE Fast Refund GmbH

 ue-de@foxmail.com  49(0)211-97538868

 Friedrich-Alfred-Straße 184 Duisburg 47226 Deutschland

Made In China

