

pTron Pulsefit P461 Smartwatch - User Manual

Caution: This smartwatch is NOT a Medical Device.



Requirements:

Android 5.0 & above | iOS 9.0 & above

Bluetooth 4.0 & above | Bluetooth 3.0

Product description:



Functions:

1. Connection mode: Click on three dashes on the left top corner of the window, click on connection status/device name, search for pTron and connect it. Then, click on synchronize all data and synchronic weather. All data will be synchronized with the App of your smartwatch.
2. Bluetooth connection: After pairing the smartwatch with the mobile App, need to connect with Bluetooth for the calling & notification purpose. Open your phone's Bluetooth, search for "pTron" and connect.
3. Dial mode: Dial displays time, date and power (after connecting to the APP, the time of the smartwatch will automatically synchronize with the phone's time).
4. Dialing: Enter the number into the dial to make a call manually.
5. Contacts: You need to synchronize contacts in the APP, and select up to 50 imports in the watch at a time to display after successful import.
6. Step counting: Enter the step counting menu to view the total number of steps, time, calories and distance of the day.
7. Heart rate function interface: The heart rate interface of the hand ring can measure your current heart rate and display the measurement results. More detailed information analysis and data recording record, can be synchronized in the APP to view.
8. Blood oxygen function interface: The blood oxygen interface of the hand ring can measure your current blood oxygen value and display the measurement results. More detailed information analysis and data recording record, can be synchronized in the APP to view.
9. Sleep interface: By default, smartwatch can record and display your total sleep time, as well as the length of deep and light sleep, from 22am to 08am. More detailed data analysis, which can be viewed synchronously in the APP.
10. Sports mode: Click into the interface of sports mode, and there are running, cycling, badminton, football and other sports modes in each mode. The interface records the time of exercise and calories generated, click enter, and then right slide out.



11. Music control: After connecting to the phone, smartwatch can control the phone's music player. When the phone plays music, click to enter and watch can be used Control the mobile phone to play/pause, the previous, the next operation.
12. Stopwatch function: Click to enter the stopwatch function to start/stop/end the operation.
13. Weather push: After smartwatch connects to the APP, the weather info is automatically pushed to the device.
14. Wallpaper push: You need to select wallpaper push on the APP device page, and push the wallpaper synchronously displayed on the device side successfully.
15. Shortcut key functions: Call records, contacts, dialing keyboard, SOS (the first number when synchronizing contacts is emergency contact)
16. Take photos: Click or shake to take photos.
17. Setting function: Switch dial, find mobile phone, APP QR code, brightness setting, volume adjustment, vibration setting, restore factory & about.
18. Message reminder: Open the reminder on the APP. When there are messages such as QQ, WeChat, call and SMS on the phone, there will be corresponding prompt on the smartwatch.
19. More functions: Sedentary reminder, water reminder, connection reminder, incoming call reminder, alarm clock reminder, charging reminder, etc.

Mobile APP Connection Mode:



Open the app and click on three dashes on left top corner of the screen.

Device name/connection status

pTron will show on screen just connect it.



It will auto sync with the phone.

1. Scan the QR code above to download or search “Lefun Health” in Android store or APP store to download install.

2. Press and hold the touch button for 3 seconds to turn it on, open and enter the “Lefun Health” app, search for the device according to the APP connection wizard, select the device model, and complete the connection pairing.

Tips: For iOS devices, please press pair the Bluetooth for the first time connecting. Afterward, smartwatch will be able to receive the income calls, texts and more notifications pushed from the iOS.

APP Function Introduction:

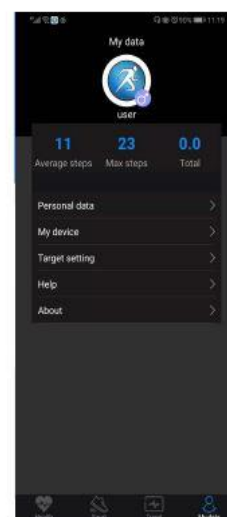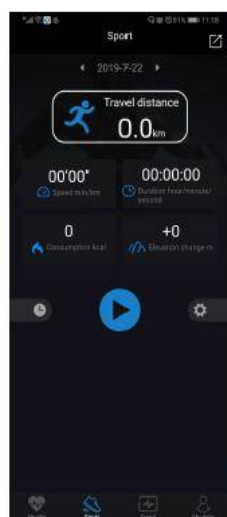

1. Home page, additional functions, personal information
2. Step module : A chart will be drawn to show the steps,distance and calories burnt accordingly. Provide an insight for user of daily, weekly and monthly data.
3. Heart rate : Provide the detail information of your heart rate daily, weekly and monthly.Your heart rate will be read in every hour.
4. Blood pressure module : Provide the detail information of your blood pressure daily, weekly and monthly. Your blood pressure will be read in every hour.
5. Blood oxygen module : Provide the detail information of your blood oxygen daily, weekly,and monthly. Your blood oxygen will be read in every hour.
6. Sleep module : Record the daily, weekly and monthly sleep information in the form of chart. Base on the smartwatch data to calculate the daily sleep quality and sleep time.

Important:

1. This smartwatch is NOT a Medical Device.
2. Take off your band before having shower or swimming.
3. Please connect the band when synchronizing data.
4. Use the 5V USB charging adapter only.
5. Do not expose the band in high moisture or extreme high temperatures.
6. When the APP crashes or reboots, please check the phone memory, clear it and try again, or exit the app to reopen it.
7. Strap is not covered in manufacturer warranty.
8. Manufacturer/brand owner reserves the right to modify the content of this user manual without prior notification. Some functions are different in the various software versions, which is normal.

Disclaimer:

The colors and specifications shown/mentioned in the user manual may differ from the actual product. The images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

