
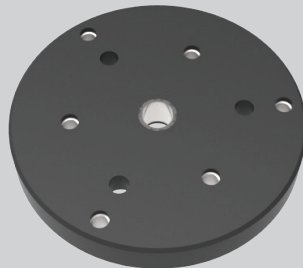


Pedestal Adaptor CI, CIII aktiv Head 75 mm / 100 mm

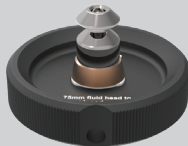

S2080-0010
S2080-0011

Adaptor Ped CI / CIII aktiv 75 mm
Adaptor Ped CI / CIII aktiv 100 mm

Contents

Box Contents	3
Attach aktiv 75 mm / 100 mm to CIII Pedestal	4
Attach aktiv 75 mm / 100 mm to CI Pedestal	6





Caution! Please refer to your fluid head and pedestal user guides for full safety instructions.



WARNING! Where this symbol appears, a potential pinch point exists, where injury to fingers or hands is possible, exercise caution.



Box Contents

S2080-0010

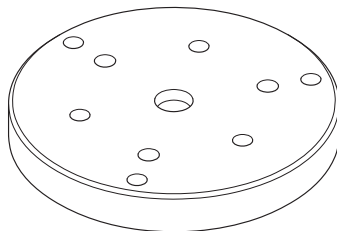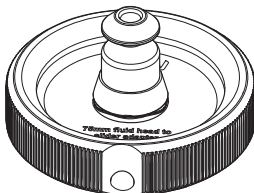

Adaptor Ped CI / CIII aktiv 75 mm

S2080-0011

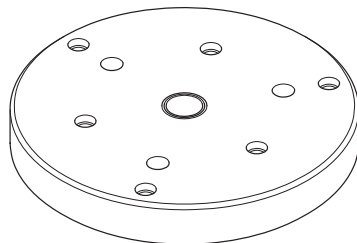
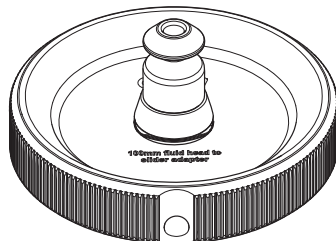


Adaptor Ped CI / CIII aktiv 100 mm


Attach aktiv 75 mm / 100 mm to CIII Pedestal

Part No. **S2080-0010 (75 mm)** **S2080-0011 (100 mm)**


1. Fix the adaptor & head to the CIII using the 3 x screws (D091205501 M5*50) supplied with the CIII pedestal. Check the adaptor is firmly attached to the pedestal.
2. Firmly screw the slider adaptor to the centre hole of the pedestal.

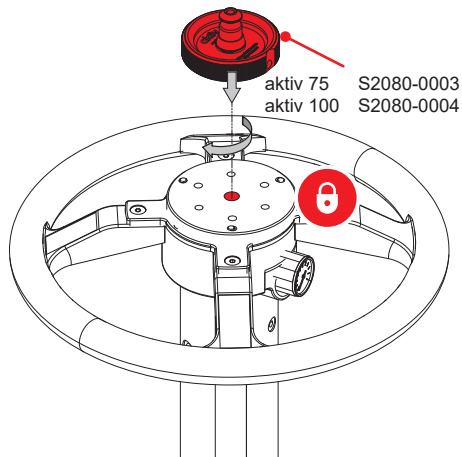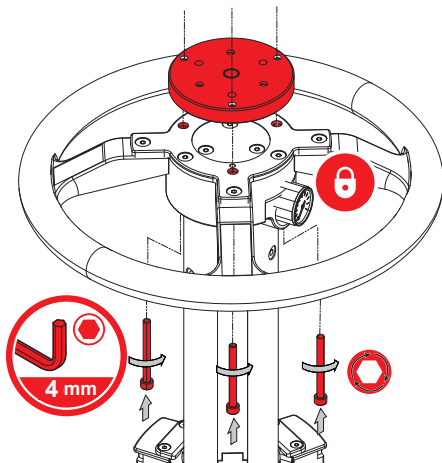

3. Lift the SpeedLevel Lever as shown all the way to the top. Lower the head onto the bowl connector and release the SpeedLevel lever. Check the head is firmly attached to the pedestal.


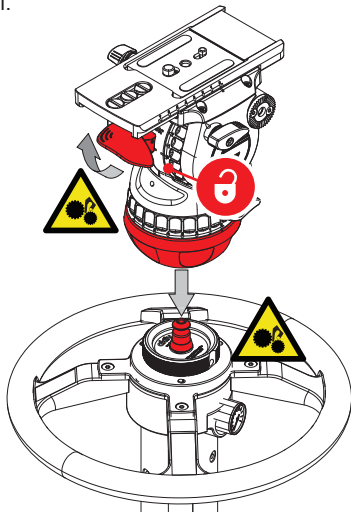


4. **CAUTION!** Push the SpeedLevel Lever fully closed against the head body before use.

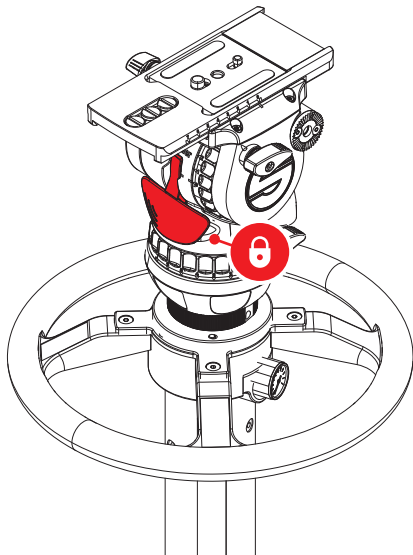



Attach aktiv 75 mm / 100 mm to CI Pedestal

1. Fix the adaptor & head to the CI using the 3 x screws (D091205351 M5*35) supplied with the CI Pedestal. Check the adaptor is firmly attached to the Pedestal.
2. Firmly screw the slider adaptor to the centre hole of the pedestal.

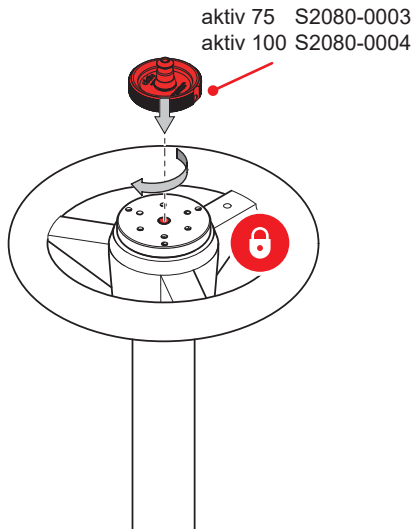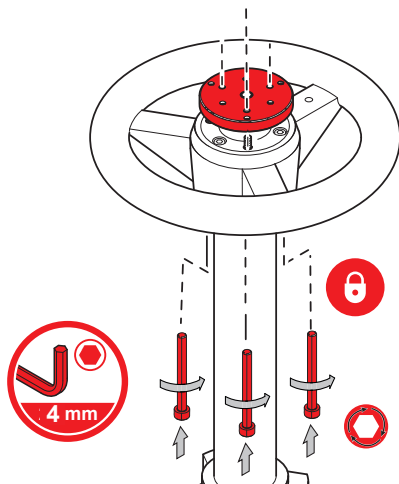

3. Lift the SpeedLevel Lever as shown all the way to the top. Lower the head onto the bowl connector and release the SpeedLevel lever.

CAUTION! Push the SpeedLevel Lever fully closed against the head body before use.
CAUTION! Check the head is firmly attached to the pedestal.

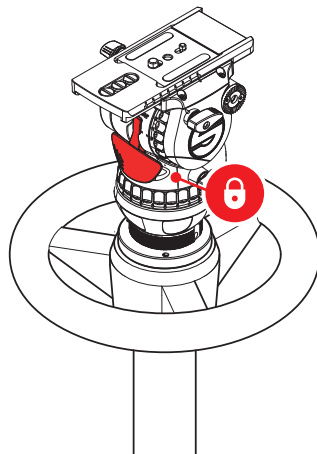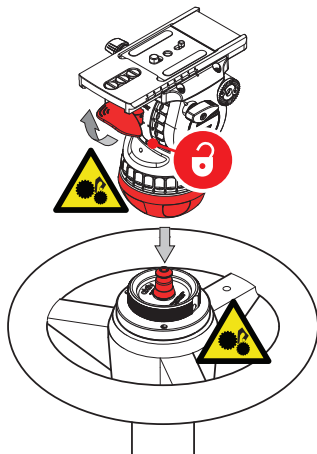

Publication Part No. S2080-4985/A



Copyright © 2021
All rights reserved.
Original Instructions: English
Published by:
Vitec Production Solutions Ltd
Email: technical.publications@vitecgroup.com



www.sachtler.com

