




Guide for connecting your reader to your mobile device and using downloaded data

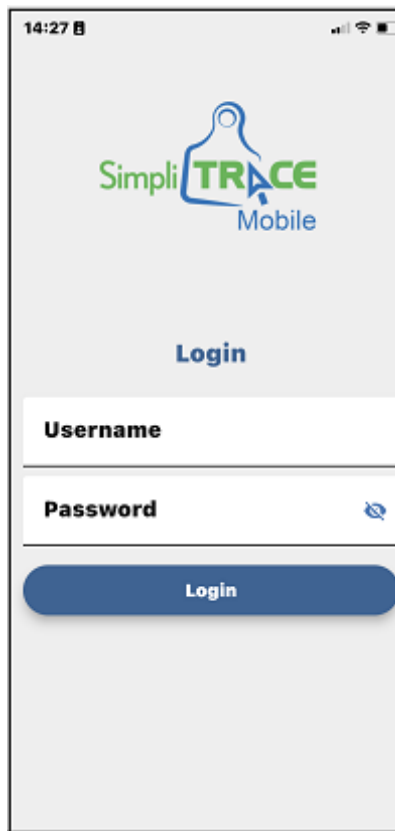

Connecting one or more Bluetooth readers to your mobile device

To be able to connect your reader to your mobile device, your device must meet the following requirements:


- Your reader must have Bluetooth;
- The Bluetooth function on your mobile device must be activated;
- The reader must be included in the list of readers sold and supported by Attestra. It should be noted that the iOS version (Apple) is only compatible with the *Allflex* models of readers sold by Attestra;
- Your reader and mobile device must be close to each other.

Depending on the version and model of your device, the appearance and location of the options may differ from the images shown in this document.

Connecting your reader to your mobile device


To transfer the data collected by your reader directly into the **SimpliTRACE Mobile** application, you must connect the two devices. The following 4 steps explain how to connect them:

1. Access **SimpliTRACE Mobile**.

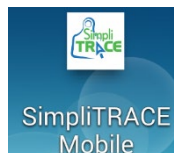

Make sure your tag reader is charged or connected to a power source.


2. On the homepage, click on the Tag reader tab at the bottom of the screen, then on Open bluetooth settings.

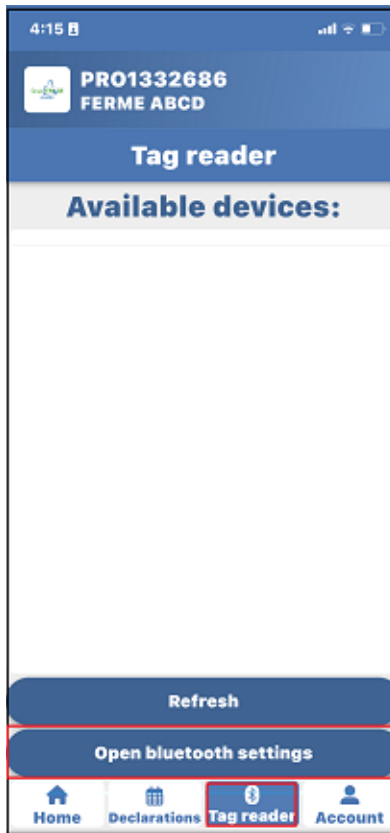

Note: On Apple devices, you will be directed to Settings, and then you must go to the Bluetooth section yourself.

3. From there, the search for available devices will be performed automatically.

You will see the name or number of your tag reader appear in the list of choices available to you. Click on the reader of your choice.

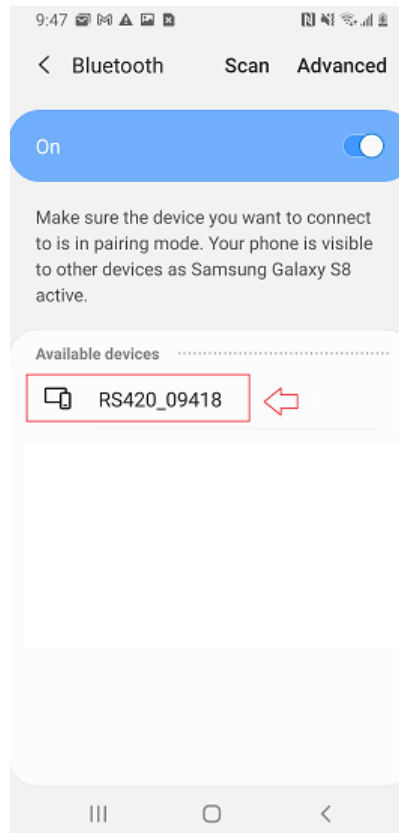

4. You will then be asked for a Bluetooth pairing code. This code is provided in the instruction manual of your tag reader and may contain numbers and/or letters.

⚠ The default Bluetooth pairing codes for our different suppliers of readers are:

- **Allflex RS320/340** : default
- **Allflex RS420 / AWR300** : 1234
- **Syscan**: default or 1234 (**Android only**)
- **Gallagher (HR3, HR4, HR5)**: 0000 (**Android only**)


Your reader is now ready to be used with the **SimpliTRACE Mobile** application.

How to transfer data from the reader to the **SimpliTRACE Mobile** application and make a declaration

In order to be able to upload the data from the reader to the **SimpliTRACE Mobile** application, please follow the 7 steps procedure below:


1. You must return to the **Simplitrace Mobile** application.

Click on the icon . If necessary, click on the button , and you will see the name of your tag reader on the screen in the Available devices section.

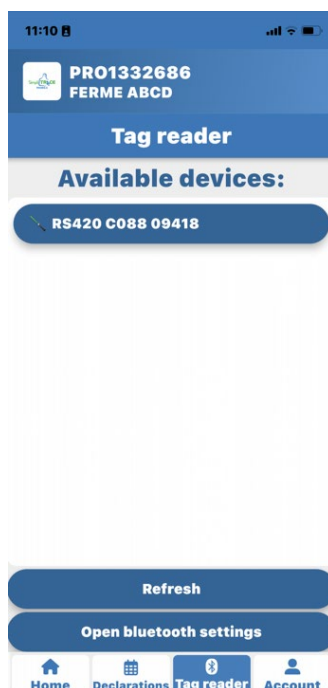


2. Click on the name or the number of the reader.

You will see your sessions in the background, and you will have two options available, i.e., to import all tags on the device, or to remove all tags from the tag reader.

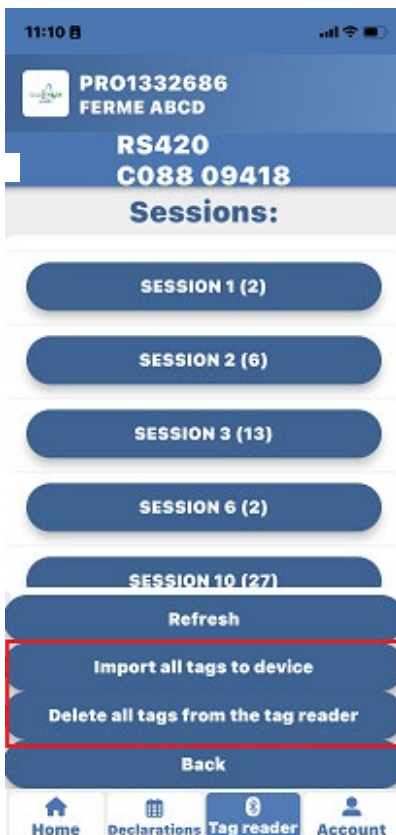

3. Choose one of the two suggested options.

Simplitrace Mobile will then ask you to confirm your choice, and then Click on OK once the download is complete.

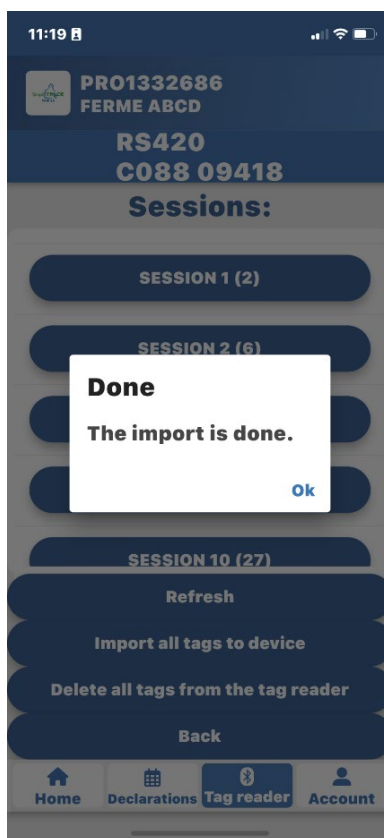


Your sessions are now imported into your mobile device.

4. Then click on the button  at the bottom of the screen.


Choose the species you want to declare, and the type of declaration you want.

5. When adding an animal, click on the option Imported tag sessions

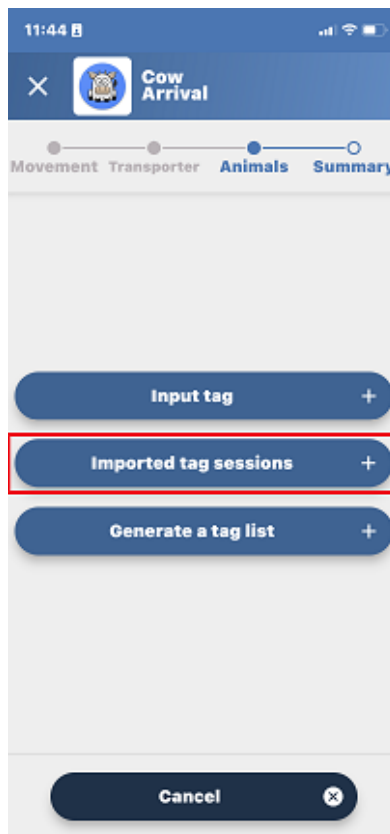

6. Press the drop-down menu to open Sessions.

You will then see the batch(es) of identifiers you have previously imported. Choose the appropriate session.

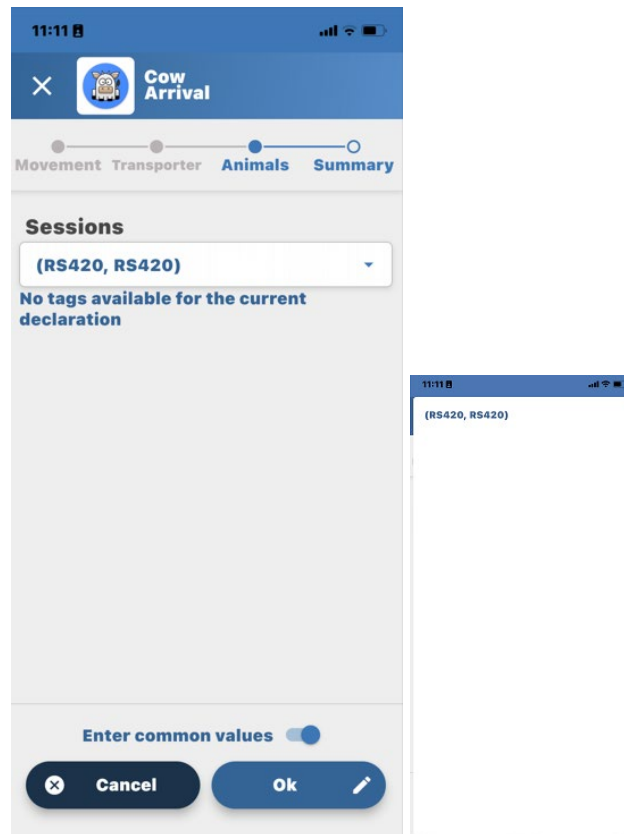

7. Check the boxes next to the tag numbers you wish to declare and press Ok.

The identifiers are now ready to be assigned to the declaration.

⚠ For more information on using [SimpliTRACE Mobile](#), please refer to the **User Guide**, available on our website.

Attestra Technical Support

If you are having trouble connecting your reader to your mobile device, contact Attestra customer service at:

Monday to Friday, from 8:30 AM to 4:30 PM (except on public holidays)

Phone: 450 677-1757
Toll free phone: 1 866 270-4319
Fax: 1 866 473-4033
Email: sac@attestra.com

Attestra

555 Roland-Therrien Boulevard, office 050
Longueuil (Québec) J4H 4E8
Telephone: 450 677-1757 – Toll-free telephone: 1 866 270-4319
Fax: 450 679-6547 – Toll-free fax: 1 866 473-4033
Website: www.attestra.com

Attestra reserves all property rights of this document. Any full or partial reproduction, transmission by electronic or by any other means, modification, use for commercial purposes or public release are prohibited without the prior written consent of Attestra.